This document covers using the "Lantronix Device Installer" software to change the IP Address of an EMRI-3N board. To begin you should have the Device Installer software installed, and connect your computer to the same LAN (local area network) that the EMRI-3N board is connected to. Alternatively, you can connect your PC directly to the EMRI-3 Board via an Ethernet cable.

To begin open the Device Installer software; the screen should be similar to Figure 1 below although the number of devices and network will vary based upon your setup.



There are 3 sections to this screen: The Menu in the upper left, the Device(s) Tree on the left, and the Device(s) List on the right.

We will start by looking at the Device List on the right, where the all the local EMRI-3 boards will be listed as 'XPort-05'. If you need to confirm you are working on the correct board, look at the Network Port at the top of the board (Figure 2) and match its MAC address to the one displayed in the list (Figure 3).



Name	User Name	User Group	IP Address	Hardware Address	Status
YPort-05			10.33.22.61	00-80-A3-AF-04-38	Unreachable
XPort-05	NET485		192.168.85.231	00-80-A3-BC-2F-E7	Online
XPort-05			192.168.86.10	00-80-A3-AD-88-70	Online
XPort-05	F	igure 3	192.168.86.232	00-80-A3-A9-ED-5B	Online



You will note in Figure 3 that the device in question is displayed in red text, while the others are in black text. This is due to the device being found, but having an IP address which does not match your LAN. In this case you have one of 2 options: Change your PC's IP address or change the IP address of the EMRI-3N.

This leads us into the first method of changing the IP address of an EMRI-3N board: Using Assign IP.

Name	User Name	User Group	IP Address	Hardware Address	Status
XPort-05			10.33.22.61	00-80-A3-AF-04-38	Unreachable
Service XPort-05	NET485		192.168.85.231	00-80-A3-BC-2F-E7	Online
Service XPort-05			192.168.86.10	00-80-A3-AD-88-70	Online
Service XPort-05	ŀ	igure 4	192.168.86.232	00-80-A3-A9-ED-5B	Online

Search

Figure 6

Method 1: Using Assign IP

- 1) Click on the board in the Device List so that its row is highlighted as shown in Figure 4 above.
- 2) In the Menu options at the top, click on Assign IP (as shown in Figure 5).
- 3) You should see a pop-up window come up (Figure 6), leave it on the default setting of 'Assign a specific IP Address' and hit the Next button.
- 4) In Figure 7 you should see an IP address field (shown in red). Put the new IP address for the board into the field and hit the Next button.
- 5) Figure 8 shows the next screen, click the Assign button to continue. After a few minutes the IP address will be assigned, simply hit the 'Finish'



🔍 Assign IP

< Back Next > Cancel Help

🛃 Upgrade

💿 Options 🤤 Exclude

button to complete changing the IP Address of the EMRI-3N board.

📚 Assign IP Address		📚 Assign IP Address	
	IP Settings	A Carlos A C	Assignment
	Please fill in the IP address, subnet, and gateway to assign the device. The subnet will be filled in automatically as you type, but please verify it for accuracy. Incorrect values in any of the below fields can make it impossible for your device to communicate, and can cause network disruption.		Click the Assign button to complete the IP address assignment.
	IP address: 10.33.22.61		
	Subnet mask: 255.0.0.0		
	Default gateway 0.0.0.0		
	Configuration information is not available for this device. The subnet mask and default gateway will not be able to be set. After the IP Address has been set successfully, then return to this Assign IP Address wizard to set the subnet mask and default gateway.		
Figure 7	< Back Next > Cancel Help	Figure 8	< Back Finish Cancel Help



The second method to change the IP address of the EMRI-3N requires your PC and the EMRI-3N to be on the same LAN. As mentioned on the previous page, you can either change your PC's IP address or use Method 1 on the previous page to change to IP of the EMRI-3N.

Method 2: Using Web Configuration

1) Double left-click on the device in the Device List or left click on it in the Device Tree. Look at the tabs at the top and select "Web Configuration". Click on the Green GO button to the left of the address bar, and you will be asked for a password. Figure 9 below shows the screen you should be on.



- 2) Leave the user name field blank, and put in "Ems8" for the password.
- 3) The web configuration should load. The only section you will need to look at is the "Network" section. Click on Network in the shortcut menu on the left (As seen in Figure 10 on the next page).
- 4) Under the selection "Use the following IP configuration", put in the new IP address of the EMRI-3N board.
- 5) **Important:** Make sure to hit the OK button at the bottom, otherwise the new network settings will not be saved.
- 6) Finally hit 'Apply Settings' on the shortcuts menu on the left. You should see a new screen with a loading bar come up (Figure 11 on the next page). After a few minutes, it will indicate that the IP Address change is complete.



7) To confirm that the IP address has changed, hit the "Search" button in the top left. You should now see that the EMRI-3 board IP address was successfully changed.

Apply Defaults	ork Mode: Wired Only V iguration Obtain IP address Auto Configuration BOOTP: DHCP AutoIP: DHCP Host Name: OUse the following IP Address:	Network Settings automatically n Methods @ Enable _ Disable @ Pconfiguration: 192 168 85 222
Anticology Serial Tunnel Serial Tunnel Hostlist IP Confi Serial Settings Connection Email Trigger 1 Trigger 2 Trigger 3 Configurable Pins Apply Settings	ork Mode: Wired Only V iguration Obtain IP address Auto Configuration BOOTP: DHCP: AutoIP: DHCP Host Name: Ouse the following IP Address:	Network Settings s automatically n Methods © Enable Disable © Enable Disable IP configuration: 192.168.85.222
Network Server Servial Tunnel Hostlist IP Confi Serial Settings Connection Email Trigger 1 Trigger 2 Trigger 3 Configurable Pins Apply Settings	ork Mode: Wired Only V iguration Obtain IP address Auto Configuration BOOTP: DHCP: AutoIP: DHCP Host Name: Ouse the following IP Address:	s automatically n Methods © Enable Disable © Enable Disable © Enable Disable IP configuration: 192.168.85.222
Server Serial Tunnel Hostiis Channel Serial Settings Connection Email Trigger 1 Trigger 2 Trigger 3 Configurable Pins Apply Settings Apply Defaults	ort: Mode: Wired Only V iguration Obtain IP address Auto Configuration BOOTP: DHCP: AutoIP: DHCP Host Name: Ouse the following IP Address:	s automatically n Methods © Enable Disable © Enable Disable © Enable Disable IP configuration: 192.168.85.222
Apply Defaults	iguration Obtain IP address Auto Configuration BOOTP: DHCP: AutoIP: DHCP Host Name: Use the following IP Address:	s automatically n Methods
Apply Defaults	Gutation Obtain IP address Auto Configuration BOOTP: DHCP: AutoIP: DHCP Host Name: Use the following IP Address:	s automatically n Methods © Enable Disable © Enable Disable © Enable Disable IP configuration: 192.168.85.222
Serial Settings Connection Email Trigger 1 Trigger 3 Configurable Pins Apply Settings	 Obtain IP address Auto Configuration BOOTP: DHCP: DHCP: DHCP Host Name: Use the following IP Address: 	s automatically n Methods @ Enable Disable @ Enable Disable @ Enable Disable IP configuration: 192.168.85.222
Connection Email Trigger 1 Trigger 2 Trigger 3 Configurable Pins Apply Settings Apply Defaults	Auto Configuration BOCTP- DHCP: AutoIP: DHCP Host Name: Use the following IP Address:	n Methods
Email Trigger 1 Trigger 2 Trigger 3 Configurable Pins Apply Settings Apply Defaults	BOOTP: DHCP: AutolP: DHCP Host Name: () Use the following IP Address:	Enable Disable Disabl
Trigger 1 Trigger 2 Trigger 3 Configurable Pins Apply Settlings Apply Defaults	DHCP: AutolP: DHCP Host Name: Use the following IP Address:	Enable Disable Disable Disable Pronfiguration: 192.168.85.222
Trigger 2 Trigger 3 Configurable Pins Apply Settings Apply Defaults	AutolP: DHCP Host Name: Use the following IP Address:	Proble Disable Disable Pronfiguration: 192.168.85.222
Apply Defaults	AutoIP: DHCP Host Name:	Obsable Disable Pronfiguration: 192.168.85.222
Apply Settings	DHCP Host Name: Use the following IP Address:	IP configuration: 192.168.85.222
Apply Settings Apply Defaults	 Use the following IP Address: 	IP configuration: 192.168.85.222
Apply Defaults	n Maaress.	132.100.03.222
	Subnet Mask:	255.255.255.0
	Default Gateway:	0.0.0.0
	DNS Server:	0.0.0.0
Etherne	et Configuration	
	Auto Negotiate	
	Speed:	100 Mbps 0 10 Mbps
	Duplex	Full Half
_		ОК
WebManager Version: 2.0.0.6		Copyright © Lantronix, Inc. 2007-2014. All rights reserved.



