

Chapter 1 – Introduction and Features

Entry-Master specializes in card access control security systems for every level of need. From a one door small business to an enterprise system with multiple locations, thousands of employees, and the need for customization - we can meet all of your security system needs.

Entry-Master is licensed as a Certified Security Systems Provider and has been providing card access control systems and security door solutions for an impressive array of businesses and organizations for over 25 years.

Entry-Master software runs seamlessly with most operating systems in a Web-enabled environment and can be customized to meet your specific needs. Tell us your access control security system needs, and we will give you a price estimate.

Overview of Features

The Entry Master Security System is manufactured in-house and uses modular hardware and software. This means that you can expand the system without eliminating major system components. You can add new software options by applying software upgrades to the existing system can add modem support for remote system monitoring and control.

Cardholder Data Management

You can instantly display cardholder data by specifying the cardholder's name or the cardholder's card number. You can rapidly display cardholder data on-screen by searching a data field that you specify.

User-Defined Activity Messages

You can modify the descriptions for each activity message displayed or logged by the system; however, the description must resemble the original description in context. For example, the description for access code number 11 is “Card Number not defined in System” and you could change it to read Unknown Card. These two descriptions have different text, but they mean the same thing: the card is not a valid card defined in the system.

User-Defined Parameter Descriptions

All user-defined parameters such as card readers, time zones, and access levels have specific predefined descriptions. For example, it is easier to understand that card number 00123456 last went through the 1st Ave. Garage Exit than card number 00123456 last went through READER 0274.

User-Defined Message Levels

You can assign different message levels to the activity messages. You may want one message level to always be logged in the system activity log, while you may not want another message to even be displayed. For example, you may want all invalid card transactions to be sent to the system printer while you may not want every valid card transaction sent to the system printer.

Global Anti-Passback

Global anti-passback provides additional security to the system. Card readers are designated as IN or OUT. This means that you can only enter the facility through a card reader designated as IN, and you can only exit the facility through a card reader designated as OUT.

In addition, each card is assigned a changeable IN or OUT status code. This means that when you enter the facility, your card is assigned a status code of IN. If you try to re-enter the facility when your card has a status code of IN, you will be denied access, the gate (or door) will not open, and the following message is logged in the activity log and displays on the monitoring console screen:

PASS-BACK ATTEMPT: Card already IN Facility.

Each IN movement must be followed by an OUT movement and vice versa. The anti-passback feature prevents a cardholder from entering a facility or garage and then passing the card back to allow another individual access to the facility or garage. Hence, the name passback.

Special Anti-Passback for Individual Cards

You can specify a Passback Mode for individual cards as either passive or active. An active status denies the cardholder access if the In/Out status of the card is incorrect. A passive status allows access regardless of the In/Out status of the card. (This is an optional feature.)

Access Group & Time Zone Control

You can define up to 100 time zones on the Entry-Master® System. You can define any combination of day-of-the-week and time-of-day. The time-of-day can be defined to the minute (for example, you can define a time zone that is from 8:01 am to 5:05 pm). Time Zones are assigned to individual cards, as well as groups of cards, through access groups. An infinite number of time zone combinations are possible through the flexible Access Group programming.

You can define up to 9999 access groups on the Entry-Master System. You can define three access groups for each card providing an unlimited range of entry/exit possibilities. You assign access groups to each card on the Cardholder Record screen. You can scroll through the defined access groups to select the access group(s) for each card; then make the proper notation.

System Card Access to the Software

You can have an optional card reader installed at your computer, which requires a special system card. A system card is a regular card (or group of cards) that allows access to the Entry-Master computer system as well as to the access control card readers. This feature ensures that there is no unauthorized access to the Entry-Master® software system. Thus, providing a high security environment.

To access the Entry-Master software with this option installed you would:

- Log into the system using your log in ID;
- Enter your password;
- Swipe the card through the card reader at the computer;
- Enter a four-digit personal identification number (PIN).

Card Access Nesting

This feature prevents cardholders from remaining in an unauthorized area longer than is necessary and simply to pass through the area. For example, a parking garage may have four levels for parking and the first level is closest to the facility entrance. Each cardholder is assigned a specific level in which they must park. However, someone who is assigned to park in Level 3 must pass through Levels 1 and 2 to get to Level 3. Most people would be tempted to park in Level 1 if there was a spot available.

The nesting feature allows the cardholder that is assigned to Level 3 to pass through Levels 1 and 2 to get to Level 3. However, the cardholder is only allowed to remain in Levels 1 and 2 long enough to pass through these levels. If the cardholder attempts to remain in Level 1 or 2 for a longer period than is allowed by the system to pass through the level, an alarm sounds and the guard is alerted to the violation.

The Entry-Master System is designed to accommodate a variety of nesting requirements. There are nine (9) nesting levels which can be defined, but literally hundreds of nested areas can be created through the use of access level restrictions. The system is designed to allow nested tiers to be interchangeable or to restrict tier-to-tier movement. Call your dealer for more details on the nesting configuration possibilities.

Cardholders can be programmed to be allowed access into multiple nested areas depending upon user-programmed time zone restrictions. For example, during business hours a cardholder may be required to park in Level 2, but after hours and on weekends that cardholder may be permitted to park in Level 1.

Optional billing can also be set up for nested violators, based upon a programmable rate structure. Using this option, a garage operator can allow nesting violators to leave the garage freely, thus preventing a traffic backup. However, at the end of the week, end of the month, or whenever is desirable, an invoice can be generated for each violating cardholder, complete with a detailed transaction listing of when and where the violation occurred.

It is also possible to STOP nesting violators at the garage exit and require them to pay the required fees immediately. This fee can also be calculated automatically by Entry-Master® based on a programmable rate structure.

The Entry-Master System is highly flexible and can be tailored to meet your individual needs. Contact your authorized Entry-Master dealer for more details about tailoring nesting or any other feature of the Entry-Master System to meet your needs.

Data Management Tools

The Entry-Master **System 5** has a graphical-user interface that is fully browser driven. In this version, you navigate, create records, and modify information in this version by clicking on links and buttons. You use the <Tab> key to move from entry field to entry field and making

selections from drop-down lists speeds data entry. Every window on the Entry-Master® System uses the same basic editing functions and buttons.

The following figure shows you various features in the web-based System 5:

*>	Card Number: 00101020	Assigned Zone: 020 - Entry-Master Systems LLC Admin. Zone
1>	User's Name: DURANT, MARK	
2>	Department: UMBC	
3>	J-Card ID Number:	
4>	Photo File ID:	
5>	Type of Card: 37 - EMS 37-bit format	
6>	Issue Date: 01/30/2017	
7>	Expiration:	
8>	Revalidate:	
9>	I/O Status: F - Forgive	at
10>	Home Phone:	16> Issue Level/PIN:
11>	Card Count:	17> <input type="checkbox"/> Trace <input type="checkbox"/> ADA Card
12>	Acc Group 1: 0000 - Card is INVALID	Nesting Level Information Card Level: 0 Violations: 0 *** Last Badging *** Date: 03/09 Rdr#: 0212 Time: 15:06 Stat: 06
13>	Acc Group 2: --- No Group Selected ---	
14>	Acc Group 3: 0020 - 1801 Access	
15>	Elev Access: 0000 - No Elevator Access	
F1>	User's Notes: [Notes]	Reader Loc Description: T/C Front Exit
Last Badging Message --->		Access Granted by Valid Card.
Save Cancel Delete Prev History Copy Next Back Print Help		

Figure 1-1. Sample Cardholder Screen

- Comfortable look and feel of a graphical-user interface.
- Clickable links quickly navigate you through the Entry-Master System.
- Drop-down lists add to the ease of data entry and increase data reliability.
- Buttons enhance the simplicity of data entry management.

Online Help

System 5 has easy-to-follow help screens that describe the full functionality and provide details descriptions for data entry. Navigational links and buttons let you move within the help screens following connected topics as you learn about the system.

There are two types of help windows: Overview and Details. An Overview Help window is available when you first access the System 5 window. A Details Help window is available after all data entry fields display (see the screen below).

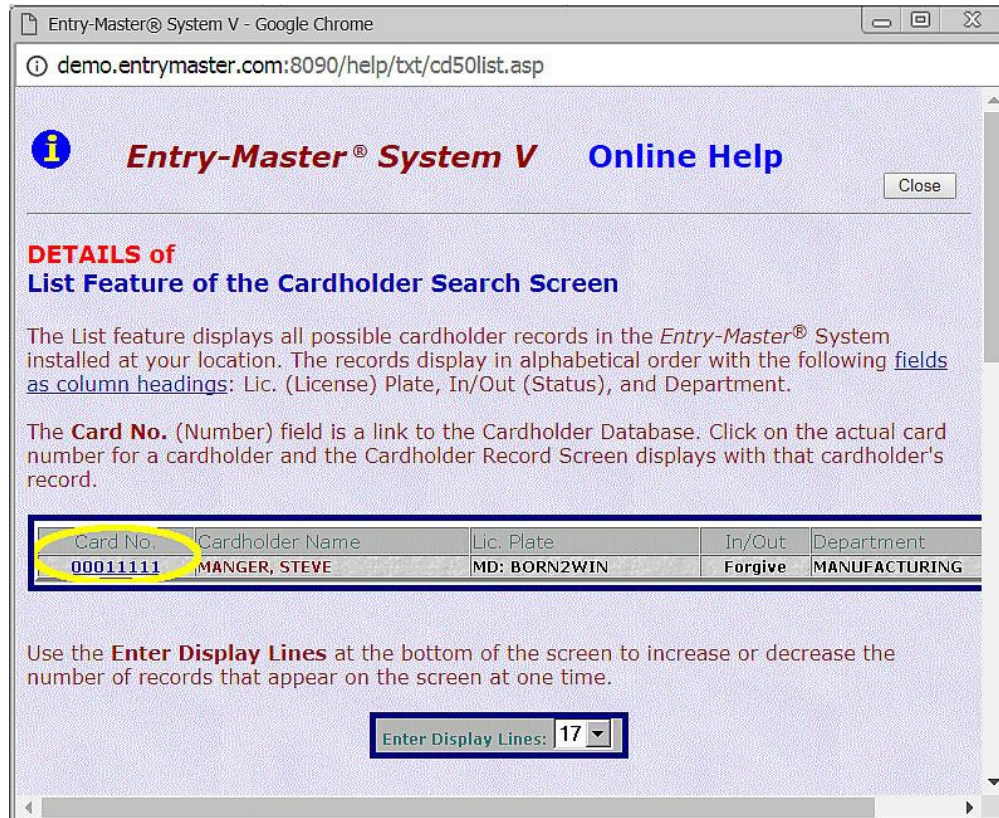 


Figure 1-2. Sample Help Screen