

Lesson 4 – Defining Card Readers

Before using Entry-Master you must define the card reader (sensor) configurations, the time zones, holidays, and the access levels for your facility. This lesson shows you how to define the card reader configurations. Subsequent lessons show you how to define time zones, holidays and access levels. Card reader configurations define the following:

- Reader Number
- Reader Location Description
- Reader I/O (In/Out) Status
- Reader Activity Status
- Alarm Report Level
- Alarm Record Level
- Nesting Level
- Anti-Passback Mode
- Door Contact Information
- Request to Exit (REX) Information
- Arming Mode
- Door Alarm Time Zone
- Auto-Map Setup
- Primary Map File

This lesson is incomplete.

*Please call Entry-Master Support for help: **443.543.6128***

To define the Card Readers, you must be logged into the Entry-Master System and at the [Main Menu](#):